



MX SERIES

NMXi INSTRUCTION MANUAL

QUICK SETUP!

SCAN CODE ▶


*USE PHONE CAMERA



or visit www.vaulteksafe.com/support/mx-series/

Warnings

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

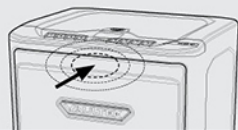

ALWAYS CHECK TO MAKE SURE THE DOOR HAS LATCHED WHEN CLOSING

This safe uses a rugged latch system. When closing press firmly near the center of the front edge. **Door requires a firm press and will lock automatically when closed properly.**

Change the default code as soon as possible to prevent unauthorized access to your safe.

DO NOT place or store the backup keys inside the safe at any time. If the battery fails, you will be unable to open the safe.

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

No safe or lock is impenetrable given the right skills and tools. Vaultek® Wi-Fi® can be connected to send you live alerts of critical safe activity including tampering and when the safe is opened. See page 16 for information.

Keep this product away from small children as the package contains small items that could become a choking hazard.

Further warnings and disclaimers on next page.

DO NOT operate a firearm without proper training and experience.

Be sure and follow all local and state firearm laws.

Nano Key Warnings

Take caution when using this feature and be responsible. Security can be compromised in the event Nano Key is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.

To avoid unintentional safe opening, Nano Key should only be used when safe is in sight.

WARNING anyone including children can access the safe via Nano Key.

ALWAYS unpair Nano Key in the event it is lost or stolen.

Disclaimers:

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE VAULTEK® SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH. VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Register your product online using the code on the right. Simply scan the code with your phone's camera or visit www.vaulteksafe.com, click Support, then Product Registration. Enter the required information in the form and click submit.

Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them.



Table of Contents

At Vaultek® we stand behind our product and you our customer. On behalf of the entire team thank you for your purchase. We believe personal defense should be handled seriously and we're excited for you to experience the ultimate performance in smart-security.


Quick Start Guide

Step 1	Battery Installation (05)	Step 3	Programming Biometric Scanner (09 / 12)
Step 2	Programming Master Code (08)	Step 4	Product Registration (04)

01 / 02	Get to Know Your Vaultek® Safe	16	- LCD Brightness
03	Basic Operations	16	- Fahrenheit/Celsius
04	Product Registration	17	- Temperature/Humidity
05 / 07	Battery	17	- Tamper Detection
05	- Installation	17	- Battery Status
06	- Charging	17	- Open Door Alarm
08	Master Code Programming	17	- Impact Detection (DMT)
09 / 12	Biometric Scanner	17	- Delete Fingerprints
10	- Programming Admin Prints 1 and 2	18	- Alert of Manual Unlock
11	- Programming Additional Prints 3 to 20	18	- Nano Key Entry Modes
12	- Deleting Fingerprints	18	- Dual Entry Mode
13 / 15	Nano Key	18	- Travel Mode
13	- Pairing	18	- Factory Reset
14	- Entry Modes	19	Securing Your Safe
14	- Unpairing	19	- Floor Mounting
16	Wi-Fi Setup	19	- Wall Mounting
16 / 18	Hot Keys	19	Modular Interior
16	- Sound	20	Customer Support/Limited Warranty
16	- Interior Light		


Get to Know Your Vaultek® Safe

The Vaultek® NMXi part of MX Series is a tough and rugged, quick access, Wi-Fi® enabled smart safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. Powered by a rechargeable lithium-ion battery, the safe combines high security with complete access control.

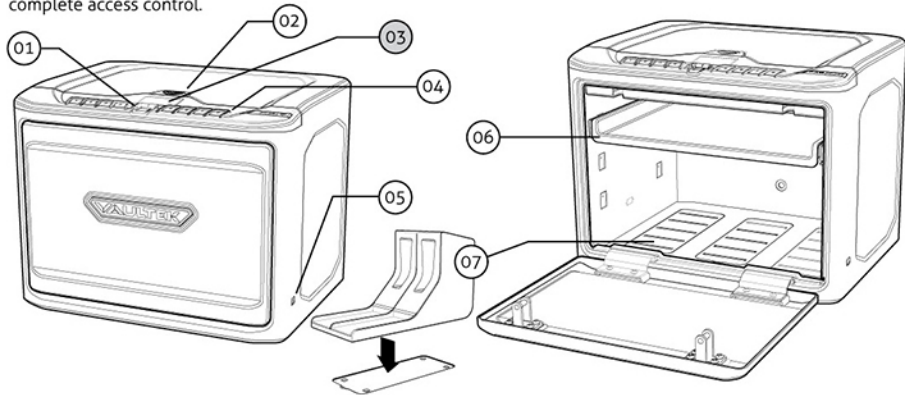


- 01. Smart Align Biometric Scanner
- 02. Silicone Key Hole Cover
- 03. LCD Screen
- 04. Numeric Keypad

- 05. Micro-USB Charging Port
- 06. Adjustable Shelf
- 07. Module System
(Twin Pistol Rack)

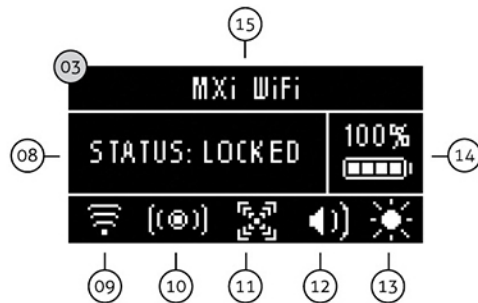

- 08. Safe Status
- 09. Wi-Fi® On/Off
- 10. Nano Key Setting
- 11. DMT Setting
- 12. Sound On/Off
- 13. Interior LEDs On/Off
- 14. Battery Level
- 15. Safe Name

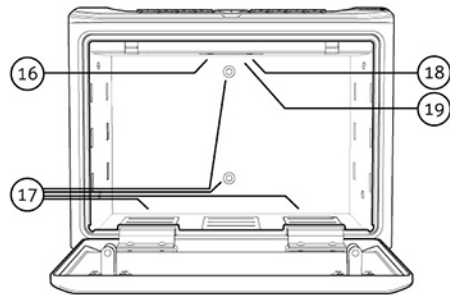

- 16. PROGRAM Button
- 17. Pre-Drilled Mounting Holes
- 18. LED Light Button
- 19. Battery Compartment

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Basic Operation: Unlocking

With the rechargeable battery installed, you can unlock your safe using any of the authorized access points.

Keypad: The numeric keypad responds quickly for rapid access and has a built-in proximity sensor that lights up when your hand brushes against the safe. See page 08 for more information.

Biometric Scanner: Personalized access for up to 20 unique fingerprints. See pages 09 to 12 for more information.

Nano Key: Remote for On Demand access. See page 13 and 15 for more information.

Key: Two keys are provided for manual access to the safe in the event the battery dies.

Basic Operation: How your Vaultek® Safe Keeps People Out

Anti-Impact Latches: Built to withstand forceful impacts and heavy slams.

No External Access Points: A combination of interior mounted hinges and extended anti-pry reinforcement bars help prevent unwanted tools from attempting to break the safe open.

Security Sleep Mode: Activates when six (6) consecutive incorrect keypad entries are entered or (6) incorrect fingerprint scans are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will beep. The security sleep mode can be cleared upon unlock of the safe by any authorized access method including the backup keys.

Impact Detection (DMT): Motion activated alarm can be disabled or enabled with three levels of sensitivity (Low, Medium, and High) using the safe's hot key functions, online dashboard, or Vaultek® Wi-Fi® app.


Alert Notifications: Wi-Fi® connectivity allows you to receive alerts such as push notifications and text alerts during critical safe activity. This includes battery levels, impacts, extreme temperatures, tampering, and anytime the safe is opened.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Product Registration

Vaultek® strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them. Your Vaultek® safe has a unique product number on the inside of the battery door and a 4-digit ID number engraved on the keys. You will need these numbers to register your safe.

- 1 Locate your product number. It is printed on the first page of this user manual and on the back of the battery door (Figure A).
- 2 Find your 4-digit ID number engraved on the keys (Figure B).
- 3 Simply scan the code with your phone's camera or visit the Vaultek® website at vaulteksafe.com and click Support then Product Registration.
- 4 Enter the required information in the form and click submit.

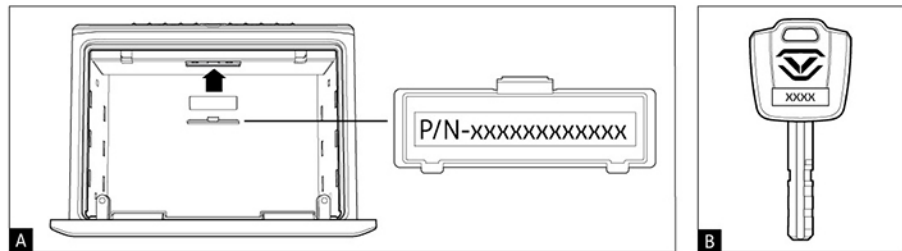

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Battery

Your safe uses a 3.7V 18650 rechargeable lithium-ion with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.



Battery: Installation

- 1 To get started, insert one of your backup keys into the keyhole at the top of the safe (Figure C). Push key in and rotate the key clockwise to open the safe.
- 2 Locate the battery compartment inside the safe beneath the control panel (Figure D).
- 3 Remove the battery cover by pressing down on the tab near the top of the cover.

Tip! Before inserting the battery make sure to place the pull string over the battery before closing the door for easy removal.

- 4 Insert the 18650 rechargeable lithium-ion battery (included in accessory box) into the battery compartment. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.
- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up.
- 6 Once you hear the tone replace the battery cover. You are now ready to program your safe.

IMPORTANT! Your Vaultek® safe will automatically lock when you fully close the door.

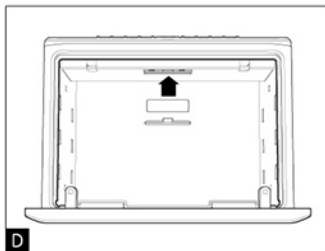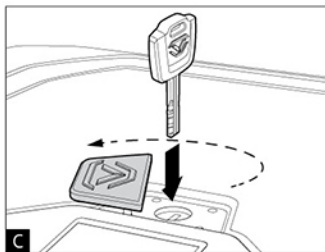

Battery: Charging

Your Vaultek® safe is powered by a rechargeable lithium-ion battery and comes with a charging kit which includes an AC power adapter and a charging cable. Safe and charging cable can be used with all international power adapters. Under normal usage, a fully charged battery can last up to one month.


Due to powerful features of MX Series it is recommended to keep the safe plugged in.

- 1 **To recharge the safe**, plug the charging cable into the receiving jack located on the lower right side of the safe (Figure E) and connect to a standard USB port or wall outlet using the AC power adapter. Approximate recharge time is 3.5 hours.
- 2 The LCD screen will indicate the power status.

Battery Maintenance: Charging Tips!

- A After installing the battery, use the charging kit provided to charge the unit 100%.
- B The charging kit can also function as an external power supply, which means you can open your safe even when the battery is depleted.
- C Leaving your safe plugged in continually will **not** harm the safe or battery.
- D A specially designed Vaultek® Powerpack is available as a separate accessory to extend operation time.
- E **IMPORTANT!** The adapter used to charge the battery should output 5V/2000mA or above when using charging cable.

See page 07 for additional information about the battery.

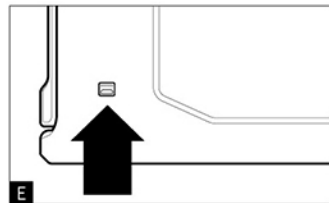

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Battery: Maintenance

Battery Maintenance: Testing the Battery Power

To check the battery level, press and hold '6' and '8' key together on the keypad for 3 second. The LCD screen will indicate the battery level.

Battery Maintenance: Low Battery

If the LED on the control panel blinks RED and you hear several rapid beeps when opening the safe, your battery level is critically low and your safe needs to be recharged immediately.

Battery Maintenance: Soft Reset Tip!

In the event the battery dies or a soft reset is performed (battery removal and installation) the safe will restore default settings for DMT, interior light, sound, Nano Key, and Alert of Manual Unlock feature. These settings will need to be readjusted, however the master code and fingerprint scanner will not be affected.

IMPORTANT! Do not use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

IMPORTANT! Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

IMPORTANT! The adapter used to charge the battery should output 5V/2000mA or above when using charging cable.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/


Master Code Programming

WARNING! First time users should change the default code as soon as possible to prevent unauthorized access.

Code Requirements Tips!

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code 6 to 8 digits in length using at least one of each key to make it more difficult for someone to guess your code.
- Avoid easy-to-guess digits such as 1234, 1111, 2222, etc.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- Default master code is 1-2-3-4 on the keypad.

- 1 Open the safe. With the safe open, press and hold the '1' key then the "PROGRAM" button together (3 seconds) (Figure F) until the LCD screen prompts you to enter your new code.
- 2 Enter your NEW master code.
- 3 Press and hold the '1' key then the "PROGRAM" button together a second time (3 seconds) until the LCD screen prompts you to re-enter your new code.
- 4 Enter your NEW master code a second time.
- 5 Press and hold the '1' key then the "PROGRAM" button together a third time (3 seconds) until the LCD screen confirms the code change is complete.

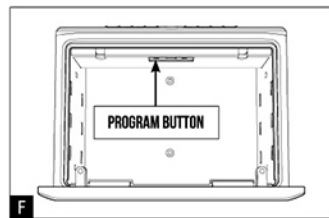

Troubleshooting! If you make a mistake and the new code will not work, simply start over with step 1.

Security Sleep Mode: For security, the safe will time out and sleep for 4 minutes if 6 incorrect entries are made.


Biometric Scanner: Overview + Tips!

Biometrics are methods of authenticating the identity of a person based on physical or behavioral characteristics. Biometric fingerprint authentication refers to technology that measures and analyzes human physical characteristics for identification and authentication purposes. The smart align biometric system guides your finger placement for consistent and accurate results.

Everyone has their own unique fingerprints, and what makes them unique is the pattern of ridges, valleys, and minutiae points that comprise an individual print. Vaultek® and their leading engineering group has developed proprietary technology to read and match fingerprints with unmatched speed and accuracy. That means that only authorized users have access to your valuables. The safe is capable of storing fingerprint data for up to 20 unique authorized users. A user consists of 5 scans of the same finger during registration. Once a user's fingerprint data is stored in the safe and encrypted, it cannot be copied or stolen.

Helpful Programming Tips!

- **Place the core of the fingerprint flat** (Figure G+H+I) over the center of the scanner in line with the side LEDs (this allows the scanner to read where most of the fingerprint detail is located) see (Figure G).
- Adjust your finger slightly between scans for increased accuracy (Figure H).
- Excessive moisture, lotions, or dirt will affect your fingerprint and may cause inaccurate sensor reading.
- **Troubleshooting!** If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

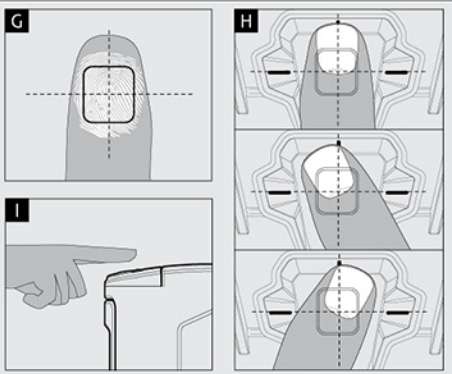


Biometric Scanner: Programming Admin Prints 1 and 2

The 1st and 2nd fingerprints will be recognized as administrative fingerprints and will be used to authorize additional users. To program additional users please refer to the next page.

Tip! The first two enrolled fingerprints are admin prints, and are required to authorize enrolling additional users (3-20).

Tip! Each fingerprint requires 5 registration scans to be enrolled into the safe.

- 1 Open the safe. Program the 1st fingerprint by pressing and holding the '2' key then the "PROGRAM" button together (3 seconds) (Figure J) until the screen prompts you to scan the 1st of five scans.
- 2 Place your finger on the fingerprint scanner for the 1st of five scans. When the safe beeps, and the screen prompts the next scan remove your finger.
- 3 Place finger again over the scanner until the safe beeps and the screen prompts the next scan and lift. You will repeat this process until all scans (1-5) are programmed. The LCD screen will indicate program complete.
- 4 Close door and test to see if the safe will open using your fingerprint.

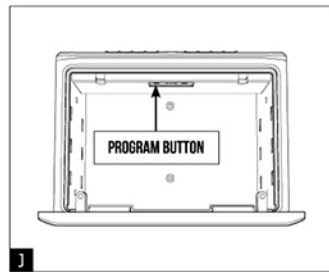

Tip! Repeat steps 1 through 4 to add the 2nd administrative fingerprint. To program prints (3-20) refer to page 11.

Troubleshooting! If the screen indicates failed to complete then start over with step 1.

Troubleshooting! If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/


Biometric Scanner: Programming Additional Prints 3 to 20

After the first two Admin fingerprints have been locked in, you can add additional users or fingerprints, up to 20 unique users in total. This is very helpful in the event the fingerprint scanner is having a hard time reading your initial fingerprints, or if you wish to grant other users authorized access to your safe. Any additional users programmed require authorization from one of the two Admin fingerprints.

- 1 Open the safe. Program additional fingerprints by pressing and holding the '2' then "PROGRAM" button together (3 seconds) (Figure K). The screen will prompt you to scan one of the administrative fingerprints.
- 2 Place one of the first two programmed administrative fingerprints on the scanner and remove when the safe beeps and screen authorizes the print. You can now program a NEW fingerprint.
- 3 Using the helpful programming tips provided on page 09 place the NEW finger on the scanner. When the safe beeps and the screen prompts the next scan remove your finger.
- 4 Place finger again over the scanner until the safe beeps and the screen prompts the next scan and lift. You will repeat this process until all scans (1-5) are programmed.

Tip! Repeat steps 1 through 4 to add additional fingerprints.

Troubleshooting! If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

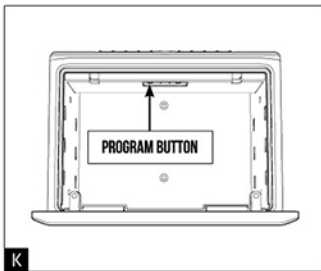

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Biometric Scanner: Deleting Fingerprints

Individual fingerprints can not be deleted from the keypad on the safe. Following this procedure will erase all of the fingerprints including both administrative fingerprints. If you wish to delete individual fingerprints, you must use the Vaultek® Wi-Fi® app or online dashboard. This procedure will not affect the keypad master code.

Tip! Fingerprints can also be temporarily disabled. Using the online Web Dashboard or Vaultek® Wi-Fi® app individual prints can be temporarily disabled and can not access the safe. This does not delete the fingerprint, only temporarily disables it until enabled again as needed.

- 1 Press and hold the '3' key then the "PROGRAM" button (Figure K) together until the safe beeps and the screen prompts you to enter your master code.
- 2 Enter your master code on the keypad. If the code is correct, the safe will beep and the screen will indicate deletion of all the fingerprints.

Biometric Scanner: Low Success Rate

If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

Let's delete the fingerprints and start over. Refer to the deleting fingerprints section above.

Now let's try reprogramming your fingerprint using the helpful tips on page 09.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/

Nano Key: Overview + Warnings!

Your Vaultek® safe supports quick access with the included Nano Key. **Take caution when using this feature and be responsible. Security can be compromised in the event it is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.**

WARNING anyone including children can access the safe via Nano Key.

WARNING On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

ALWAYS unpair Nano Key in the event it is lost or stolen.

IMPORTANT! Nano Key should be mounted less than 6 feet away from safe for proper operation. Use in long range is not recommended as it may cause accidental opens.

Nano Key: Pairing

IMPORTANT! Be sure to follow **ALL** steps for proper function:

- 1 Press and hold the '5' key then "PROGRAM" button together (3 seconds) until the LCD screen indicates CONNECTING.
- 2 Aim Nano Key towards the safe and press the center button. If the safe beeps and the screen indicates COMPLETE then the Nano Key has paired successfully. If the screen indicates FAILED TO PAIR then simply start over with step 1.
- 3 **Set Nano Key Entry Mode:** After pairing, Nano Key will be immediately active to test functionality, but then deactivate. Nano Key settings will need to be set to either On Demand or Progressive in order for Nano Key to open your safe. See Nano Key Entry Modes on next page for more information.

Troubleshooting! If Nano Key works for a moment then stops working after pairing then you need to start over with step 1. After pairing you must assign an entry mode to finalize the pairing sequence.

Nano Key: Entry Modes

After pairing you can toggle between access modes from the keypad, Wi-Fi® smartphone app, or the online Web Dashboard. To toggle modes from the safe's keypad press and hold the '6' key then "PROGRAM" button together until the LCD screen indicates each mode as below.

- **OFF**
- **Progressive Entry Mode:** Safe goes into sleep mode and will require you to wake up the safe before using Nano Key. You can wake up the safe by pressing any key or brushing your hand across the keypad of the safe (backlit keys will turn RED).
- **On Demand Entry Mode:** This mode grants immediate access to your safe without having to wake it up.

WARNING! On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

Tip! On Demand entry mode requires significant power usage and can greatly reduce operation time. We suggest setting the Nano Key to Progressive entry mode to conserve battery, unless the safe is constantly plugged into a power outlet.

Nano Key: Unpairing

Tip! Disabling the Nano Key function from the Wi-Fi® app, Web Dashboard, or safe's keypad will NOT delete a paired key from the safe's memory. In the event a Nano Key is lost or stolen, you can delete the lost Nano Key from the safe's memory by using a couple different methods:

- A Press and hold '5' key then "PROGRAM" button together (3 seconds) until the LED flashes RED and the LCD screen indicates CONNECTING. This is the same sequence used when initially pairing. After the screen indicates FAILED TO PAIR the safe will delete a paired Nano Key from memory.
- B Anytime a new Nano Key is paired with the safe, the previous key will be erased from the safe's memory.

Continue on next page for more information about Nano Key.

Nano Key: Multiple Safe Management

- A** Multiple Nano Keys can not pair with the same safe. It is recommended to pair one Nano Key per safe.
- B** Recommended setting when using the Nano Key is Progressive entry mode.
- C** You can manage multiple safes through the Vaultek® Wi-Fi® smartphone app and Web Dashboard.


CAUTION when managing multiple safes in On Demand entry mode there is a chance you can open all safes within range.

Nano Key: Battery Replacement

The pre-installed battery will last approximately two years before requiring replacement. When needed follow the steps below to complete replacement.

- 1** Access the battery compartment by twisting the bottom battery cover counterclockwise, then remove the cover.
- 2** Remove the old battery by firmly lifting up on its sides to release it from its clips. A small screwdriver can help pry the battery out if used carefully.
- 3** Insert a new model CR2032 battery positive side (+) facing up. Be sure and insert the battery edge under the brass clip first (Figure L), then press firmly into place (Figure L). Replace the battery cover and twist clockwise to tighten in place.

Tip! The battery will not install correctly without first being placed under the brass clip. Damage to the remote may occur.

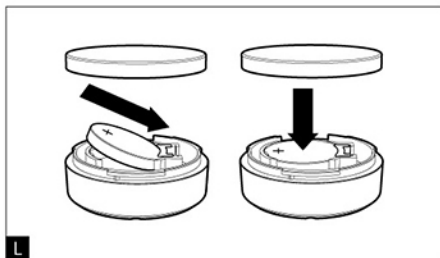

Wi-Fi Setup

Access online setup using the code on the right. Simply scan the code with your phone's camera or visit www.vaulteksafe.com/support/mx-series/ and select your model.

Tip! We suggest connecting your safe directly to the router using the Vaultek® WiFi app or with the router's WPS button. Once connected, view your safe's online dashboard at dashboard.vaulteksafe.com.

If you have any questions about your Vaultek® safe or need help configuring the system, please visit www.vaulteksafe.com/support/slider-series/ and/or email our support team at support@vaulteksafe.com.



Hot Keys

Sound

Press and hold '1' and '3'

To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. The screen will indicate the sound is ON and beep or the screen will indicate OFF and not beep.

Interior Light

Press and hold '5' and '7'

With the light toggled to ON you can press the LIGHT button inside the safe to illuminate the LED lights and you can also adjust the brightness from the Vaultek® Wi-Fi® smartphone app or Web Dashboard. If the light is toggled OFF the light will be disabled. To toggle the interior light ON/OFF press and hold keys '5' and '7' together for 3 seconds.

LCD Brightness

Press and hold '5' and '8'

The LCD screen has four brightness levels: 25%, 50%, 75%, and 100%. To toggle the LCD brightness press and hold '5' and '8' together for 3 seconds. The screen will indicate the brightness level.

Fahrenheit/Celsius

Press and hold '2' and '6'

By default, the safe will measure temperature in Fahrenheit. To toggle press and hold keys '2' and '6' together. The display will indicate either Fahrenheit or Celsius.

Continue on next page for more Hot Keys.

Hot Keys

Temperature/Humidity

Press and hold '2' and '5'

Your Vaultek® safe has built in sensors to monitor the internal temperature as well as the relative humidity inside your safe. Press keys '2' and '5' together to display the information on your safe's LCD screen. You can also monitor the safe's temperature and humidity from the Vaultek® Wi-Fi® smartphone app and online Web Dashboard. You even have the option to set thresholds and be alerted of any significant changes.

Tamper Detection

Press and hold '2' and '4'

To check for tampering press and hold keys '2' and '4' together for 3 seconds. The screen will indicate TAMPERING or CLEAR. You can reset the tamper detection by opening the safe through one of the authorized entry points. Tampering includes incorrect keypad entries as well as incorrect fingerprint scans.

Battery Status

Press and hold '6' and '8'

To check the battery level press and hold keys '6' and '8' together for 3 seconds. The screen will indicate the battery level. See pages 06 to 07 for more information.

Open Door Alarm

Press and hold '3' and '5' then "PROGRAM" button

Your safe features an open door alarm that will sound when the safe door is left open for more than 8 minutes. By default, this alarm is ON. To toggle press and hold keys '3' and '5' then "PROGRAM" button together (3 seconds). The screen will indicate ON or OFF.

Impact Detection (DMT)

Press and hold '7' then "PROGRAM" button

Your Vaultek® safe has a built-in accelerometer and corresponding alarm that alerts of any attacking to your safe including bumps and impacts, DMT (Impact Detection). DMT is enabled by default and its sensitivity has three settings; Low, Medium, and High. You can toggle through these settings by pressing and holding the '7' key then "PROGRAM" button together for 3 seconds. The screen will indicate LOW, MEDIUM, and HIGH as well as DISABLED.

Delete Fingerprints

Press and hold '3' then "PROGRAM" button then enter master code

To delete fingerprints press and hold the '3' key then "PROGRAM" button together until the safe beeps and the screen prompts you to enter your master code. Enter your master code on the keypad. This will remove ALL the fingerprints. To delete individual fingerprints you can use the Vaultek® Wi-Fi® app or Web Dashboard.

Alert of Manual Unlock

Press and hold '3' '6' then "PROGRAM"

If the Alert of Unlock is ON, and someone opens the safe with either the key or by picking the lock, the keypad will start flashing and beep for 10 seconds. To toggle Alert Unlock press and hold keys '3' and '6' then "PROGRAM" button together for 3 seconds. The status bar on keypad will flash GREEN indicating enabled or RED indicating disabled. If ON and activated it can only be cleared by entering master code or scanning an authorized fingerprint. Default is OFF.

Nano Key Entry Modes

Press and hold '6' then "PROGRAM" button

Nano Key has THREE modes: OFF, Progressive Entry Mode, and On Demand Entry Mode. **OFF** disables Nano Key access. **Progressive Entry Mode** requires that you wake the safe first (keypad illuminates red) and then activate the Nano Key. **On Demand Entry Mode** grants immediate access when activating the Nano Key. Pressing and holding the '6' key then "PROGRAM" button together for 3 seconds will allow you to toggle through each mode from the keypad. You may also alternate modes in the Vaultek® Wi-Fi® app or Web Dashboard.

Dual Entry Mode

Press and hold '8' then "PROGRAM" button

If the Dual Entry is toggled ON, you will be required to enter your master code and fingerprint (and vice versa) to open the safe. This mode requires that at least one fingerprint be programmed into the safe. To toggle the Dual Entry ON/OFF press and hold the '8' key then "PROGRAM" button together for 3 seconds. The screen will indicate ENABLED or DISABLED.

Travel Mode

Press and hold '1' and '8'

Save battery life by disabling the proximity sensor, fingerprint sensor, keypad, Nano Key, Wi-Fi®, and status bar. To toggle travel mode ON/OFF press and hold keys '1' and '8' together for 3 seconds. The screen will indicate ENABLED or DISABLED.

Factory Reset

Press and hold '2' and '7' then "PROGRAM" button

The Factory Reset erases ALL programmed information and restores the safe to its default settings. This includes any network configurations and enrolled fingerprints. The master code is reset to 1-2-3-4 and the safe will restart. The safe must be configured again to work with the Vaultek® Wi-Fi® smartphone app and the Web Dashboard. To perform a factory reset press keys '2' and '7' and PROGRAM together for 3 seconds.

Securing Your Safe


Your Vaultek® safe can be secured via the included mounting screws to a flat surface using the pre-drilled holes on the bottom and back of the safe.

Securing Your Safe: Floor Mounting

Remove the covers to access bottom mounting holes (Figure M).

Securing Your Safe: Wall Mounting

Locate the holes on the back of the safe.

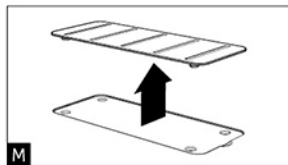

- 1 Locate all pre-drilled holes inside safe for mounting.
- 2 Remove safe and drill pilot holes for hardware.
- 3 Position safe in place and mark holes for drilling.
- 4 Reposition safe and install/tighten hardware.

Modular Interior

Your MX Series safe features a customizable interior system with a height adjustable pull out shelf and drop in modules to help with storage and organization.


Modular Interior: Adjust Interior Shelf Height

- 1 Lift the shelf vertically to remove from mounting brackets.
- 2 Remove the screw/mounting brackets from the sidewalls and reinstall at the desired height.
- 3 Place shelf back onto the mounting brackets and press down firmly to install.

Modular Interior: Drop In Modules

A twin pistol rack is included and can be placed wherever there is an insert cover. A range of different modules are available for purchase.

- 1 Remove the covers to access the slots to attach each module, and snap into place.

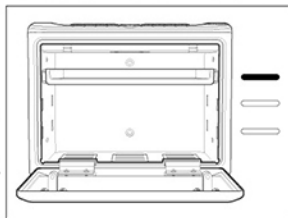

Customer Support

If you have a problem with your Vaultek® safe, we encourage you to visit www.vaulteksafe.com/support/ and select your safe. You can also email our support team at support@vaulteksafe.com.

Limited Warranty (Terms and Conditions)

VAULTEK® IS COMMITTED TO PROVIDING PRODUCTS OF HIGH QUALITY AND VALUE AND MAKES EVERY EFFORT TO ENSURE ITS PRODUCTS ARE FREE OF DEFECTS.

Vaultek® guarantees your safe will be free of defects in materials or workmanship for a period of two years from the date of original purchase from an authorized dealer and three years with verified product registration.

The warranty is only valid for the original purchaser and not transferable. This warranty is only valid for products purchased and operated in the U.S. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglected, modification, damage inadvertently caused by the user, accidents and/or tampering.

If service is needed Vaultek will, at its option, exchange or repair without charge for parts or labor. Upon authorization of warranty service, customers are responsible for securely packaging product. Additionally, customers are responsible for costs of shipping to and from Vaultek service center.

If the claimed defect cannot be identified or reproduced, customers will be held responsible for the costs incurred. Please have the following information available before you begin a claim with Vaultek:

- Purchaser's name, mailing address, email address, and a phone number.
- Copy of receipt or online order number (if purchased directly from us or Amazon)
- Authorized Dealer Name (if applicable)
- Detailed description of the problem

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

FCC

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement. Power is so low that no RF exposure calculation is needed.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

STOP! Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please visit Support at vaulteksafe.com.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/mx-series/



VAULTEK®

37 North Orange Ave. Suite 770 Orlando, FL 32801

VAULTEKSAFE.COM