

Online Support, Tutorials, and Vaultek® ViSN™

Scan QR code with your phones camera or visit vaulteksafe.com/support and select your model.

Vaultek Safe Inc. | 624 Douglas Ave Suite 1412, Altamonte Springs, FL 32714 Email: support@vaulteksafe.com | Online Support: vaulteksafe.com/support

OUICK SETUP GUIDE

Follow these steps to get your safe up and running

Step 1: Plug in the safe and install four AAA batteries. (Batteries not included) This safe needs to be plugged in continuously for normal function and four AAA batteries need to be installed. These batteries provide backup power in the event of a power outage and will provide power for about 3 months in Low Power Mode allowing quick access to the safe.

Important! The safe will beep periodically until four AAA batteries are installed to alert you that no batteries are installed.

Step 2: Setup your safe with Vaultek® ViSN™ smartphone app. Using the Vaultek ViSN smartphone app, you can program your safe, customize safe settings, and receive live alerts of critical safe activity from anywhere around the world.

Step 3: Program the Master Code and Biometric Scanner. The ViSN smartphone app will guide you through programming.

Step 4: Register the safe. Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them.

 
WARNINGS

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

- Before using this safe, inspect the safe to make sure the door latches properly. You can perform a quick test by using the included mechanical key. Open and close the safe 5 times. Do not use the product if you notice any problem or defect. Please
- email Vaultek customer support at support@vaulteksafe.com. Always check to make sure the safe door has latched when closing. This safe uses a rugged latch system. When closing press firmly near the center of the front door. Door requires a firm press and will lock automatically when closed properly.
- Change the default code as soon as possible to prevent unauthorized access to your safe.
- DO NOT lose the keys. In the event of power outage four AAA batteries will last about 3 months in Low Power Mode. DO NOT place or store the backup keys inside the safe at any time.
- DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.
- Keep this product away from small children as the package contains small items that could become a choking hazard.

AT A GLANCE

The Vaultek® ViSN MR is a tough and rugged, quick access, ViSN™ enabled smart safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. Powered by the AC power adapter. and backup batteries, the safe combines high security with complete access control



- 1. Numeric Keypad 2. Silicone Key Hole Cover
- 3 LCD Screen
- 4. Power Port
- 5. Pull Out Shelf 6. Program Button
- 7. Battery Cover

brushes against the safe.

Program Button



8. Safe Status 11. Impact Detection 14. Battery Level Q Wi-Fi® 12 Sound

(8)- STATUS: LOCKED

Dustin's Safe

13. Interior LEDs

15. Safe Name

Manual Key Cover

10. Nano Key

LCD Screen



POWER

This MR Series ViSN safe needs to be plugged in continuously for normal function including the use of VISN and four AAA batteries need to be installed.

In the event of a power outage, the safe will switch to Low Power Mode and the backup battery will last about 3 months in this mode. The safe will go online only when the safe is awake, and offline when in standby. During standby, Nano Key is NOT supported.

Plug-In Required

 
1. Plug in the safe using the included power adapter (A).

Backup Batteries Required

1. Open the safe. Key entry is located at top of the safe.

For optimal performance, we recommend Duracell/Energizer or other reputable brands.







Plug-In Required: This safe is powered by the AC power adapter and

Backup Battery Required: This safe has backup power via four AAA

Keypad: The numeric keypad responds quickly for rapid access

and has a built-in proximity sensor that lights up when your hand

Biometric Scanner: ViSN Mode can store up to 80 fingerprints, while

batteries (not included) and needs them for normal function.

needs to be plugged in continuously for normal function.

Security Sleep Mode: Activates when six (6) consecutive incorrect keypad entries are entered or (6) incorrect fingerprint scans are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will beep. The security sleep mode can be cleared upon unlock of the safe by any authorized access method including the backup keys.

SET UP YOUR SAFE WITH VISN™

The Vaultek ViSN smartphone app guides you step by step through programming your safe and gives you access to advanced features not possible with the keypad alone. Combined with the web dashboard, you'll have complete control and enhanced functionality at your fingertips.

Program the Master Code and Biometric Scanner: Step by step programming instructions via the ViSN smartphone app.

Live Alerts: Receive real time alerts of critical safe activity. Customize Safe Settings: Interior Light Brightness, Sound Levels Alert Preferences, and more from the ViSN smartphone app.

 
1. Smartphone App: Download the Vaultek ViSN smartphone app from Google Play or the Apple Store. Open the app and follow the on-screen prompts.

Web Dashboard: Go to www.vaultekvisn.com. Safe programming not available with the ViSN web dashboard.

Need help? Visit vaulteksafe.com/support and select your model for troubleshooting and other helpful information. You can also email our support team at support@vaulteksafe.com.

MOUNTING

Your Vaultek safe can be secured via the included mounting screws to a flat surface such as the wall or floor using the pre-drilled holes on the bottom and back of the safe



Visit our mobile-friendly online guide. Includes tutorial videos at vaulteksafe.com/support and select your model.

PROGRAMMING

Using the Vaultek ViSN smartphone app, you can program your safe with guided step by step instructions

- Master Code Programming
- Biometric Scanner Programming
- Nano Key Programming
- 1. Smartphone App: Download the Vaultek ViSN smartphone app from Google Play or the Apple Store. Open the app and follow the on-screen prompts.

Essential Mode: If you don't want to use Wi-Fi connectivity via ViSN you can place the safe in Essential Mode. This mode allows the safe to be programmed as a standalone safe including the master code and biometric scanner without the need for Wi-Fi connectivity. Wi-Fi features from ViSN and Nano Key are not supported in Essential Mode. Reference the "Essential Mode Hotkeys" section of this manual for further details

 
Visit our mobile-friendly online guide. Includes tutorial videos at vaulteksafe.com/support and select your model.

INTERIOR SHELF

Your safe features a pull out shelf to help with storage and organization.

Removing the Shelf

1. Pull the drawer out as far as it will go, and locate the lever on each side of the rail. Depress each lever and pull the shelf out from the safe



Installing the Shelf

1. Carefully align each rail with the base rails inside the safe. Push the shelf all the way into the safe to snap the side rails back in place

KEYPAD HOTKEYS

Your MR Series ViSN safe has settings which are accessible using the keypad hotkeys and Vaultek ViSN smartphone app.

Tamper Detection: Press and hold keys '2' and '4' together. The screen will indicate TAMPER OCCURRED or CLEAR. You can reset the tamper detection by opening the safe through one of the authorized entry points.

Battery Status: Press and hold keys '6' and '8' together for 3 seconds The screen will indicate the battery level.

Sound: (Medium by Default): Press and hold the '1' and '3' keys together to toggle through each sound option; Low, Medium, High, or OFF

Factory Reset: Open the safe using the included key and leave the key turned all the way in the clockwise position. Press and hold keys '2' '7' and Program button together until the safe restarts. The factory reset will erase all programmed information and restores the safe to its factory default settings. This includes any network configurations. The master code is rest to 1-2-3-4, and the safe will restart. The safe's Wi-Fi will need to be configured again to enabled all the ViSN features.

PRODUCT REGISTRATION

Vaultek strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including three year warranty, technical support and ordering replacement keys should you misplace them. Please visit the Vaultek website at vaulteksafe.com and click Support/Product Registration and enter the required information.

DISCI AIMER

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE LISER SHALL DETERMINE THE SUITABILITY OF THE VALUERS SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH, VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

ESSENTIAL MODE HOTKEYS

Essential Mode has settings that are accessible using the keypad hotkeys only. In ViSN Mode, these same settings are accessible using the smartphone app.

Safe Mode (ViSN or Essential): By default your safe is in ViSN Mode. Essential mode can be enabled by pressing and holding the '8' key and Program button together until the safe restarts. You can toggle between modes as needed, and the safe will retain all programming and system settings for each mode.

ViSN Modes allows you to connect your safe to Wi-Fi which gives you access and control over features that are not possible in Essential mode. In addition, to live alerts of critical safe activity. Essential Mode allows the safe to be programmed as a standalone safe without the need for Wi-Fi connectivity. Nano Key is not supported in Essential Mode.

Essential Mode Programming the Master Code and Biometric Scanner: Visit vaulteksafe.com/support and select your model for programming instructions. Nano Key is not supported in this mode. Essential Mode Hotkeys: For the full list of keypad hotkeys such

as Open Door Alarm visit vaulteksafe.com/support and select your model. You can also scan the OR code in this user manual.

FCC

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement, Power is so low that no RE exposure calculation is needed FCC statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused

by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment NOTE: This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which
- the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.