



VT SERIES

NVTi INSTRUCTION MANUAL

QUICK SETUP!

SCAN CODE


*USE PHONE CAMERA



or visit www.vaulteksafe.com/support/vt-series/

Warnings

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

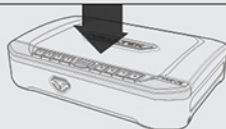

ALWAYS CHECK TO MAKE SURE THE LID HAS LATCHED WHEN CLOSING

This safe uses a rugged latch system. When closing press firmly near the center of the front edge. **Lid requires a firm press and will lock automatically when closed properly.**

Change the default code as soon as possible to prevent unauthorized access to your safe.

DO NOT place or store the backup keys inside the safe at any time. If the battery fails, you will be unable to open the safe.

DO NOT expose to extreme heat or cold. Battery power may be affected.

DO NOT use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

DO NOT store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

No safe or lock is impenetrable given the right skills and tools. Vaultek® Wi-Fi® can be connected to send you live alerts of critical safe activity including tampering and when the safe is opened. See page 14 for information.

Keep this product away from small children as the package contains small items that could become a choking hazard.

Further warnings and disclaimers on next page.

DO NOT operate a firearm without proper training and experience.

Be sure and follow all local and state firearm laws.

Nano Key Warnings

Take caution when using this feature and be responsible. Security can be compromised in the event Nano Key is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.

To avoid unintentional safe opening, Nano Key should only be used when safe is in sight.

WARNING anyone including children can access the safe via Nano Key.

ALWAYS unpair Nano Key in the event it is lost or stolen.

Disclaimers:

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE VAULTEK® SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH. VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Register your product online using the code on the right. Simply scan the code with your phone's camera or visit www.vaulteksafe.com, click Support, then Product Registration. Enter the required information in the form and click submit.

Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them.



Table of Contents

At Vaultek® we stand behind our products and you our customer. On behalf of the entire team thank you for your purchase. We believe personal defense should be handled seriously and we're excited for you to experience the ultimate performance in smart security.

Quick Start Guide

Step 1 Battery Installation (03)

Step 2 Programming Master Code (06)

Step 3

Programming Biometric Scanner (07 / 10)

Step 4


Product Registration (18)

01	Get to Know Your Vaultek® Safe	14	- Sound
02	Basic Operations	14	- Battery Status
02	Secure Defense	15	- Travel Mode
03 / 05	Battery	15	- Interior Light
03	- Installation	15	- Open Door Alarm
04	- Charging	15	- Impact Detection (DMT)
06	Master Code Programming	16	- Alert of Manual Unlock
07 / 10	Programming Biometric Scanner	16	- Nano Key Entry Modes
08	- Programming Admin Prints 1 and 2	16	- Delete Fingerprints
09	- Programming Additional Prints 3-20	16	- Dual Entry Mode
10	- Deleting Fingerprints	16	- Factory Reset
11 / 13	Nano Key	17	Securing Your Safe
11	- Pairing	17	- Using the Steel Security Cable
12	- Unpairing	17	- Using the Mounting Screws
14	Wi-Fi Setup	18	Product Registration
14	Hot Keys	19	Troubleshooting
14	- Tamper Detection	20	Customer Support / Warranty

Get to Know Your Vaultek® Safe

The Vaultek® NVTi part of VT Series is a tough and rugged quick access safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash and other personal items. Powered by a rechargeable lithium-ion battery, the safe combines high security with complete access control.

This safe has been granted two United States Patents. An exterior design patent as well as a patent for Vaultek's signature two point latch system. U.S. Patent No. US D817,589 S | U.S. Patent No. US 10,253,529

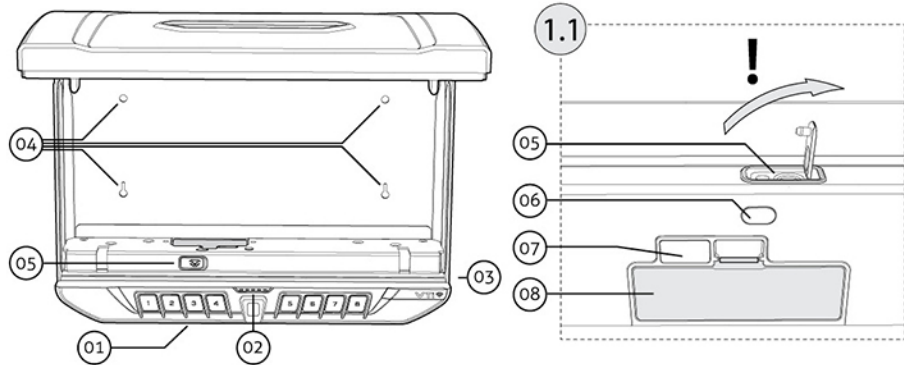

01: Key Cover
02: LED Status Bar
03: Micro-USB Charging Port

04: Pre-Drilled Mounting Holes
05: Program Button (Located Beneath Protective Cover)

06: LED Light Button
07: LED Light
08: Battery Compartment

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series

Basic Operation

With the rechargeable battery installed, you can unlock your safe using any of the authorized access points.

Keypad: The numeric keypad responds quickly for rapid access and has a built-in proximity sensor that lights up when your hand brushes against the safe. See page 06 for more information.

Biometric Scanner: Personalized access for up to 20 unique fingerprints. See pages 07 to 10 for information.

Nano Key: Remote for On Demand access. See page 11 and 13 for more information.

Key: Two keys are provided for manual access to the safe in the event the battery dies.

Before using this safe, inspect the safe to make sure the lid latches properly. You can perform a quick test by using the included mechanical key. Opening and closing the safe 5 times. Do not use the product if you notice any problem or defect. Please email Vaultek customer support at support@vaulteksafe.com.

Secure Defense: How your Vaultek® Safe keeps people out.

Anti-Impact Latches: Built to withstand forceful impacts and heavy slams.

Mounting Feature: Secure your safe to a stationary object via the included high strength steel security cable or via the two pre-drilled mounting holes using the included mounting hardware.

Security Sleep Mode: Activates when six (6) consecutive incorrect keypad entries are entered or (6) incorrect fingerprint scans are made. The safe will not accept any entries for four minutes. If a button is pressed during this mode, all of the numbers will flash RED and the alarm beeps. A backup key may be used to open the safe.

Alert of Manual Unlock Activates when someone opens the safe with either the key or by picking the lock, the keypad will start flashing and the safe will beep for 10 seconds. To clear the alarm you must enter the authorized master code or scan an authorized fingerprint. By default this is toggled OFF. To enable reference the hot key section on page 16.

Battery: Installation

Your safe uses a 3.7V 18650 rechargeable lithium-ion with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

- 1 To get started, insert one of your backup keys into the keyhole at the front of the safe (see Figure A). Push key in and rotate the key clockwise until you open the safe.
- 2 Remove the interior padding. Locate the battery compartment door on the inside of the safe directly behind the '4' key on the keypad (see Figure B).
- 3 Remove the battery cover by pressing down on the tab near the top of the cover.



Tip! Before inserting the battery make sure to place the pull string over the battery before closing the door for easy removal.

- 4 Insert the battery (included in accessory box) into the battery compartment making sure the pull string is above the battery. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.
- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up. Once you hear the tone and see the keypad light up, replace the battery cover. You are now ready to program your safe.

Tip! After installing the battery, use the charging kit provided to charge the unit 100%.

IMPORTANT! Your Vaultek® safe will automatically lock when you fully close the lid.

Tip! Register your safe online. This is important in the event you lose your keys. See page 07.

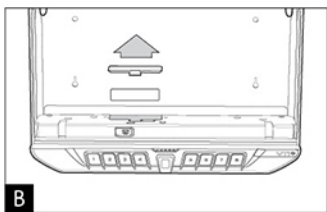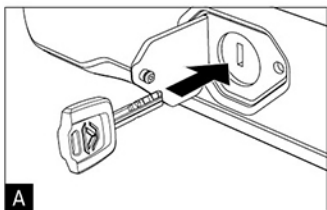

Battery: Charging

Your Vaultek® safe is powered by a rechargeable lithium-ion battery and comes with a charging kit which includes an AC power adapter and a micro-USB cable. Safe and micro-USB cable can be used with all international power adapters. Under normal usage, a fully charged battery can last for several months.


IMPORTANT! If another adapter is used to charge the battery, the output should be 5V/2000mA or above when using micro-USB.

- 1 To recharge the safe, plug the micro-USB cable into the micro-USB receiving jack located on the right side of the safe (Figure C) and connect to a standard USB port or wall outlet using the AC power adapter. Approximate recharge time is 2.5 hours.
- 2 The LED on the side of the safe (Figure C) will glow RED indicating charging or GREEN indicating that charging is complete.

Battery Maintenance: Charging Tips!

- After installing the battery, use the charging kit provided to charge the unit 100%.
- The charging kit can also function as an external power supply, which means you can open your safe even when the battery is depleted.
- Leaving your safe plugged in continually will **not** harm the safe or battery. However, to preserve battery life we suggest that you unplug occasionally to allow the battery to cycle down.
- A specially designed VT powerpack is available as a separate accessory to extend operation time.
- If the first LED on the status bar is blinking RED then your battery level is critical. Refer to "Low Battery Warning" on page 05 to learn more.

See the FAQ section for additional information about the battery.

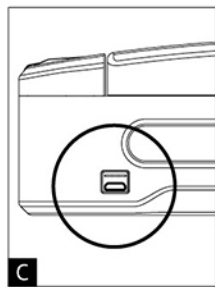

Battery: Maintenance

Battery Maintenance: Testing the Battery Power

To check the battery level, press and hold the '6' and '8' key together on the keypad for 3 seconds. The status bar from left to right will glow GREEN or RED to indicate the battery level:

- Remaining Battery Capacity Level
- If 5 LEDs glow green: 80%-100%
- If 4 LEDs glow green: 60%-80%
- If 3 LEDs glow green: 40%-60%
- If 2 LEDs glow green: 20%-40%
- If 1 LED glows red: 10%-20%
- If 1 LED blinks red: less than 10%

Battery Maintenance: Low Battery Warning

If the first LED on the status bar blinks RED several times and you hear several rapid beeps when opening the safe, your battery level is critically low and your safe needs to be charged immediately.

Battery Maintenance: Soft Reset Tip

In the event the battery dies or a soft reset is performed (battery removal and installation) the safe will restore default settings for interior light, sound, and Alert of Manual Unlock feature. These settings will need to be readjusted, however the master code and fingerprint scanner will not be affected.

IMPORTANT! Do not use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

IMPORTANT! Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

IMPORTANT! The adapter used to charge the battery should output 5V/2000mA or above when using micro-USB cable.

Master Code Programming

WARNING! First time users should change the default code as soon as possible to prevent unauthorized access to your safe.



Programming Tips!

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code 6 to 8 digits in length using at least one of each key to make it more difficult for someone to guess your code.
- Avoid easy-to-guess digits such as 1234, 1111, 2222, etc.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- Default master code is 1-2-3-4 on the keypad.

- 1 Open the safe. With the safe open, lift the protective "PROGRAM" cover (Figure D.1). Press and hold the '1' key then the "PROGRAM" button together (3 seconds) until all status bar LEDs turn RED and let go.
- 2 Enter your NEW master code.
- 3 **IMMEDIATELY** Press and hold the '1' key then the "PROGRAM" button together a second time (3 seconds) until all status bar LEDs turn RED and let go.
- 4 Enter your NEW master code a second time.
- 5 **IMMEDIATELY** Press and hold the '1' key then the "PROGRAM" button together a third time (3 seconds) until the safe beeps and all status bar LEDs turn GREEN and let go. This tone confirms that the code has been reset.

Troubleshooting! If you make a mistake and the new code will not work, simply start over with step 1.

Security Sleep Mode: For security, the safe will time out and sleep for 4 minutes if 6 incorrect entries are made.

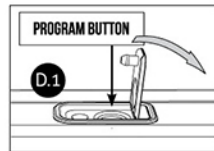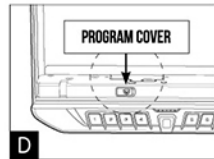


Biometric Scanner: Overview + Tips!

Biometrics are methods of authenticating the identity of a person based on physical or behavioral characteristics. Biometric fingerprint authentication refers to technology that measures and analyzes human physical characteristics for identification and authentication purposes.

Everyone has their own unique fingerprints, and what makes them unique is the pattern of ridges, valleys, and minutiae points that comprise an individual print. Vaultek® and their leading engineering group has developed proprietary technology to read and match fingerprints with unmatched speed and accuracy. That means that only authorized users have access to your valuables. The safe is capable of storing fingerprint data for up to 20 unique authorized users. A user consists of 5 scans of the same finger during registration. Once a user's fingerprint data is stored in the safe and encrypted, it cannot be copied or stolen.

Helpful Programming Tips!

- **Place the core of the fingerprint flat** (Figures E + F + G) over the center of the scanner (this allows the scanner to read where most of the fingerprint detail is located) see (Figure E).
- Adjust your finger slightly between scans for increased accuracy (see Figure F).
- Excessive moisture, lotions, or dirt will affect your fingerprint and may cause inaccurate sensor reading.
- **Troubleshooting!** If you are having difficulty with your print, program the same finger 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

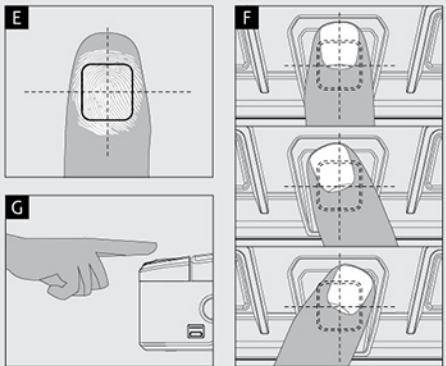

Biometric Scanner: Programming Admin Prints 1 and 2

The 1st and 2nd fingerprints will be recognized as administrative fingerprints and will be used to authorize additional users. To program additional users refer to the next page.

Tip! The first two enrolled fingerprints are admin prints, and are required to authorize enrolling additional users (3-20).



Tip! Each fingerprint requires 5 registration scans to be enrolled into the safe.

- 1 Open the safe. Program the 1st fingerprint by pressing and holding the '2' key then the "PROGRAM" button together (3 seconds) (Figure H and H.1) until the first LED on the status bar located above the fingerprint sensor blinks RED.
- 2 Place your finger on the fingerprint scanner for the 1st of five scans. When the safe beeps and the first status bar LED lights up GREEN remove your finger.
- 3 Place finger again over the scanner until the safe beeps and the second status LED lights up GREEN and lift. You will repeat this process until all status bar LEDs (1-5) are solid GREEN.
- 4 Close lid and test to see if the safe will open using your fingerprint.

Tip! Repeat steps 1 through 4 to add the 2nd administrative fingerprint. To program prints (3-20) refer to page 09.

Troubleshooting! If the entire status bar is blinking RED then refer to programming fingerprints 3-20 on next page.

Troubleshooting! If you experience issues refer to the helpful programming tips listed on page 07 or view our tutorials online at vaulteksafe.com/support/vt-series/.

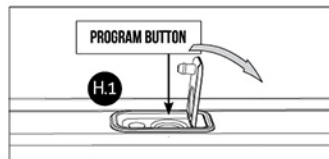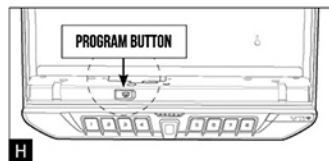

Biometric Scanner: Programming Additional Prints 3 to 20

After the first two Admin fingerprints have been locked in, you can add additional users or fingerprints, up to 20 unique users in total. This is very helpful in the event the fingerprint scanner is having a hard time reading your initial fingerprints, or if you wish to grant other users authorized access to your safe. Any additional users programmed require authorization from one of the two Admin fingerprints.

- 1 Open the safe. Program additional fingerprints by pressing and holding the '2' key and "PROGRAM" button together (3 seconds) (Figure H.1 on page 08). The entire status bar will blink RED prompting you to scan one of the administrative fingerprints.
- 2 Place one of the first two programmed administrative fingerprints on the scanner and remove when the safe beeps and the entire status bar blinks GREEN. When the first LED on the status bar starts blinking RED you can enroll a NEW fingerprint.
- 3 Using the helpful programming tips provided on page 07 place the NEW finger on the scanner. When the safe beeps and the first LED in the status bar lights up GREEN remove your finger.
- 4 Place finger again over the scanner at a slightly different angle until the safe beeps and the second status LED lights up GREEN and lift. You will repeat this process until all status bar LEDs (1-5) are solid GREEN.

Tip! Repeat steps 1 through 4 to add additional fingerprints.

Troubleshooting! If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series

Biometric Scanner: Deleting Fingerprints

Individual fingerprints can not be deleted from the keypad on the safe. Following this procedure will erase all of the fingerprints including both administrative fingerprints. If you wish to delete individual fingerprints, refer to the Vaultek® Wi-Fi® app. This procedure will not affect the keypad master code.

- 1 Press and hold the '3' key then the "PROGRAM" button together until **all** the status bar LEDs light up RED and let go.
- 2 Enter your master code on the keypad. If the code is correct, all the status bar LEDs will blink GREEN and safe will beep indicating deletion of **all** the fingerprints.

Biometric Scanner: Low Success Rate

If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

- 1 Let's delete the fingerprints and start over. Refer to the deleting fingerprints section above.
- 2 Now let's try reprogramming your fingerprint using the helpful tips on page 07.
- 3 Open the safe. Program the 1st fingerprint by pressing and holding the '2' key and "PROGRAM" button together (3 seconds) (Figure H.1 on page 08). The first LED on the status bar located above the fingerprint scanner will blink RED.
- 4 Place your finger on the fingerprint scanner for the 1st of five scans until the safe beeps and the second status LED lights up GREEN and lift.
- 5 Rotate your finger position and place your finger on the scanner again. You will repeat this process until all scans (1-5) are programmed.
- 6 Close the safe and test to see if the safe will opens using your fingerprint.

Nano Key

Your Vaultek® safe supports quick access with the included Nano Key. **Take caution when using this feature and be responsible. Security can be compromised in the event it is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.**

WARNING anyone including children can access the safe via Nano Key.

WARNING On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

ALWAYS unpair Nano Key in the event it is lost or stolen.

IMPORTANT! Nano Key should be mounted less than 6 feet away from the safe for proper operation. Use in long range is not recommended as it may cause accidental opens.

Nano Key: Pairing (Three Steps)

IMPORTANT! Be sure to follow **ALL** steps 1 to 3 for proper function:

- 1 Press and hold the '5' key then "PROGRAM" button together (3 seconds) until all status bar LEDs blink RED.
- 2 Aim Nano Key towards the safe and press. If all the lights on the status bar glow GREEN and safe beeps, the Nano Key is paired successfully; if all lights on the status bar blink RED, the Nano Key failed to pair. In this case, simply start over with step 1.
- 3 **Set Nano Entry Mode:** After pairing, Nano Key will be immediately active to test functionality, but then deactivate. Nano Key settings will need to be set to either On Demand or Progressive in order for Nano Key to open your safe. See next page for more information.

Troubleshooting! If Nano Key works for a moment then stops working after pairing then you need to start over with step 1. After pairing you must assign an entry mode to finalize the pairing sequence.

Nano Key: Entry Modes

Continue on next page for more information about Nano Key.

After pairing you can toggle between access modes from the keypad, Wi-Fi® smartphone app, or the online Web Dashboard. To toggle modes from the keypad press and hold the '6' key then "PROGRAM" button together. The status bar will communicate as directed below.

- **OFF** - Status Bar Turns Solid RED
- **Progressive Entry Mode** - Status Bar Blinks GREEN: Safe goes into sleep mode and will require you to wake up the safe before using Nano Key. You can wake up the safe by pressing any key or brushing your hand across the keypad of the safe (backlit keys will turn RED).
- **On Demand Entry Mode** - Status Bar is Solid GREEN: This mode grants immediate access to your safe without having to wake it up.

Warning! On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

On Demand entry mode requires significant power usage and can greatly reduce operation time. We suggest setting the Nano Key to Progressive entry mode to conserve battery, unless the safe is constantly plugged into a power outlet.

Nano Key: Unpairing

Tip! Disabling the Nano Key function from the Wi-Fi® app, Web Dashboard, or safe's keypad will NOT delete a paired Nano Key from the safe's memory. In the event a Nano Key is lost or stolen, you can delete the lost Nano Key from the safe's memory by using a couple different methods:

- A Press and hold '5' key then "PROGRAM" button together (3 seconds) until all status bar LEDs blink RED. This is the same sequence used when initially pairing. After the status bar LEDs blink RED for 6 seconds the safe will delete a paired Nano Key from memory.
- B Anytime a new Nano Key is paired with the safe, the previous key will be erased from the safe's memory.

Nano Key: Open Your Safe

You must be approximately 5-8 feet before pressing the enter button. If you are using PROGRESSIVE ENTRY mode, you will need to awaken the safe first. Simply brush your hand across the keypad to illuminate the keys and then press the enter button on your Nano Key to open your safe.


Nano Key: Multiple Safe Management

- Multiple Nano Keys can not pair with the same safe. It is recommended to pair one Nano Key per safe.
- Recommended setting when using the Nano Key is Progressive entry mode.
- You can manage multiple safes through the Vaultek® Wi-Fi® smartphone app.
- **CAUTION** when managing multiple safes in On Demand entry mode there is a chance you can open all safes within range.

Nano Key: Battery Replacement

When Nano Key status LED flashes RED (3) times that indicates a low battery. Replace the battery per steps below:

- 1 Twist base of Nano Key counter clockwise to access compartment.
- 2 Remove old battery by firmly lifting up on its sides to release it from its clips. A small screwdriver can help pry the battery out if used carefully.
- 3 Insert a new model CR2032 battery positive side (+) facing up. Insert the battery edge under the brass clip first, then press firmly into place (Figure I). Replace the battery cover and twist clockwise to tighten in place. The battery will not install correctly without first being placed under the brass clip. Damage to the remote may occur.

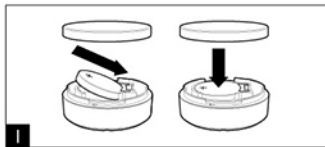

Nano Key: Mounting

The mounting base comes with double-sided tape allowing for quick and easy installation. Simply peel off the protective layer on the reverse side of the base, and place where desired.

Wi-Fi® Setup

Access online setup using the code on the right. Simply scan the code with your phone's camera or visit www.vaulteksafe.com/support/vt-series/ and select your model.

Tip! We suggest connecting your safe directly to the router using the Vaultek® WiFi app or with the router's WPS button. Once connected, view your safe's online dashboard at dashboard.vaulteksafe.com.

If you have any questions about your Vaultek® safe or need help configuring the system, please visit www.vaulteksafe.com/support/vt-series/ and or email our support team at support@vaulteksafe.com.



Hot Keys

Continue on next page for more hot keys.

Tamper Detection

Press and hold '2' and '4'

To check for tampering press and hold keys '2' and '4' together for 3 seconds. The status bar will glow RED to indicate tampering or GREEN to indicate no tampering. You can reset the tamper detection by opening the safe through one of the authorized entry points.

Sound

Press and hold '1' and '3'

To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. If the status bar glows GREEN and beeps, the sound is ON; if the status bar glows RED, the sound is OFF.

Battery Status

Press and hold '6' and '8'

To check battery level press and hold keys '6' and '8' together 3 seconds. The status bar will glow GREEN or RED to indicate the battery level. See page 05 for more information.

Hot Keys continue on next page.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series

Hot Keys

Travel Mode

Press and hold '1' and '8'

Save battery life by disabling the proximity sensor, fingerprint sensor, keypad, status bar, Nano Key, Wi-Fi features. To toggle travel mode ON/OFF press and hold keys '1' and '8' together until the safe beeps and the status bar lights up. If the status bar glows RED and beeps, the safe is disabled; if the status bar glows GREEN and beeps, the safe is operational.

Interior Light

Press and hold '5' and '7'

To toggle the interior light ON/OFF press and hold keys '5' and '7' together for 3 seconds. With the light toggled to ON you can press the "LIGHT" button inside the safe to illuminate the light and can adjust brightness in the Vaultek® Wi-Fi® app. If the light is toggled OFF the light will be disabled.

Open Door Alarm

Press and hold '3' and '5' then "PROGRAM" together

Your safe features an open door alarm that will sound when the safe door is left open for more than 8 minutes. By default, this alarm is ON. To toggle off press and hold keys '3' and '5' and PROGRAM together for 3 seconds. The status bar will glow GREEN to indicate ON and RED to indicate OFF.

Impact Detection (DMT)

Press and hold '7' then "PROGRAM" together

Your Vaultek® safe has a built-in accelerometer and corresponding alarm that alerts of any attacking to your safe including bumps and impacts, DMT (Impact Detection). DMT is enabled by default and its sensitivity has three settings; Low, Medium, and High. You can toggle through these settings by pressing and holding the '7' key then "PROGRAM" button together for 3 seconds. If all FIVE lights on the status bar glow solid GREEN, the High setting is enabled; if FOUR lights on the status bar glow solid GREEN, the Medium setting is enabled; if THREE lights on the status bar glow GREEN, the Low setting is enabled; if all lights on the status bar glow RED, DMT is disabled (OFF).

Alert of Manual Unlock

Press and hold '3' '6' then "PROGRAM" together

If the Alert of Unlock is on, and someone opens the safe with either the key or by picking the lock, the keypad will start flashing and beep for 10 seconds. To toggle Alert Unlock press and hold keys '3' and '6' then "PROGRAM" button together for 3 seconds. The status bar will flash GREEN indicating enabled or RED indicating disabled. If ON and activated it can only be cleared by entering the master code or scanning an authorized fingerprint. Default is OFF.

Nano Key Entry Modes

Press and hold '6' then "PROGRAM" together

To toggle Nano Key entry modes press and hold the '6' key then "PROGRAM" button together for 3 seconds. The status bar will indicate each mode as listed on page 12. You may also alternate modes in the Vaultek® Wi-Fi® app.

Delete Fingerprint

Press and hold '3' then "PROGRAM" together then enter master code

To delete fingerprints press and hold the '3' key then "PROGRAM" button together until all status bar LEDs light up RED then enter your master code. This will remove all the fingerprints. You can delete individual fingerprints in the Vaultek® Wi-Fi® app or Web Dashboard.

Dual Entry Mode

Press and hold '8' then "PROGRAM" together

To toggle the Dual Entry ON/OFF press and hold the '8' key then "PROGRAM" button together for 3 seconds. If the status bar glows GREEN, this feature is ON. If the status bar glows RED this feature is OFF. If the Dual Entry is toggled ON, you will be required to enter your master code and fingerprint (and vice versa) to open the safe. This mode requires that at least one fingerprint be programmed in the safe.

Factory Reset

Press and hold '2' '7' then "PROGRAM" together


The Factory Reset erases ALL programmed information and restores the safe to its default settings. This includes any network configurations and enrolled fingerprints. The master code is reset to 1-2-3-4 and the safe will restart. The safe must be configured again to work with the Vaultek® Wi-Fi® smartphone app and the Web Dashboard. To perform a factory reset press keys '2' and '7' and "PROGRAM" together for 3 seconds.

Securing Your Safe

Your Vaultek® safe can be secured a few different ways. Included is a security cable to attach your safe to larger stationary objects. There are also mounting screws included to mount the safe to a flat surface using the pre-drilled holes on the bottom.

Securing Your Safe: Using the Security Cable

- 1 Loop the security cable around a secured object.
- 2 Run the end the cable through the eye of the other end and pull tight around the object.
- 3 Place the end of the security cable inside the fully enclosed quick release cable mount inside your Vaultek® safe as shown in (Figure J).
- 4 Make sure the safe closes with the cable secured inside the quick release cable mount.

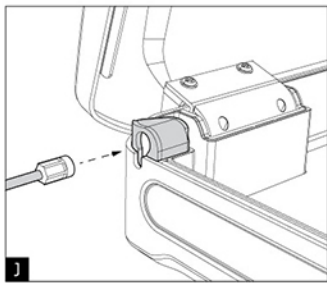

Securing Your Safe: Using the Mounting Screws

Tip! Make sure you have enough clearance for the lid to open properly before mounting the safe.



- 1 Position the safe on a flat surface where you want to mount it.
- 2 Use a pencil to mark the holes for drilling.
- 3 Drill pilot holes.
- 4 Position safe in place and install screws through safe into pilot holes. Tighten screws.

IMPORTANT! Mounting the safe vertically so that the door flips upward will result in incomplete opening of the safe due to weight. The door will open if the safe is mounted so that the door opens down or to the side.

Product Registration

Vaultek® strongly encourages you to register your safe as soon as you receive it. **Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them.** Your Vaultek® safe has a unique product number on the inside of the battery door and a 4-digit ID number engraved on the keys. You will need these numbers to register your safe.

- 1 Locate your product number. It is printed on the first page of this user manual and on the back of the battery door (Figure K).
- 2 Find your 4-digit ID number engraved on the keys (Figure L).
- 3 Please visit the Vaultek® website at vaulteksafe.com and click Support/Product Registration.
- 4 Enter the required information in the form and click submit.

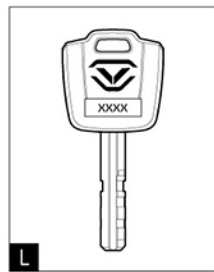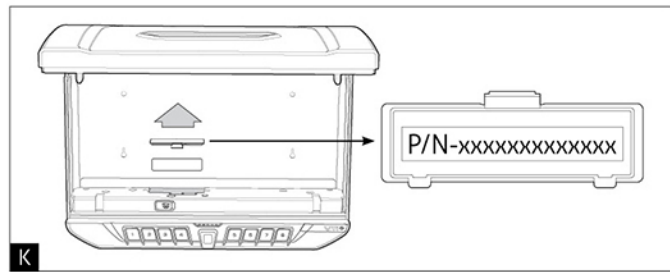

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series

Troubleshooting

If you experience any issues with your Vaultek® safe or need help configuring the system, we encourage you to visit www.vaulteksafe.com/support/vt-series. You can also email us at support@vaulteksafe.com.

Nano Key is not working. After pairing you need to assign an entry mode. Refer to Enable Nano Key on page 11. After Nano Key is paired you need to assign to either On Demand or Progressive entry mode, otherwise Nano Key will disable after pairing.

Fingerprint scanner works sometimes and not others. We have a few suggestion to help improve the success rate on page 10.

Lid is not engaging. The lid requires a firm press. You will feel the latches engage if you press slowly. Feel/listen for the click.

The keypad is not responding. Remove the battery and reinstall. This is a soft reset for the safe. See if you are able to open the safe using the keypad or reprogram the safe's master code. If you are still experiencing issues please contact our support team via email at support@vaulteksafe.com or visit vaulteksafe.com and select Support for helpful tutorials.

Sound is not working. To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. If the status bar glows GREEN and beeps, the sound is ON; if the status bar glows RED the sound is off. If the sound is toggled on and you still can't hear it, have someone in your house listen. The tones are high pitch.

Unable to change master code. Refer to page 06 of the user manual or check our tutorials online at vaulteksafe.com under Support.

Soft Reset Tip! Remove the battery and reinstall. This is a soft reset to the safe. The safe will restore default settings for interior light, sound, and Alert of Manual Unlock feature. These settings will need to be readjusted, however the master code and fingerprint scanner will not be affected.

STOP! Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please visit www.vaulteksafe.com/support/vt-series/ and or email us at support@vaulteksafe.com.

Customer Support

If you have a problem with your Vaultek® safe that is not answered in the Troubleshooting section of this manual, we encourage you to visit www.vaulteksafe.com/support/vt-series.

Limited Warranty: Terms and Conditions

Vaultek® IS COMMITTED TO PROVIDING PRODUCTS OF HIGH QUALITY AND VALUE AND MAKES EVERY EFFORT TO ENSURE ITS PRODUCTS ARE FREE OF DEFECTS.

Vaultek® guarantees your safe will be free of defects in materials or workmanship for a period of two years from the date of original purchase from an authorized dealer and three years with verified product registration.

The warranty is only valid for the original purchaser and not transferable. This warranty is only valid for products purchased and operated in the U.S. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglected, modification, damage inadvertently caused by the user, accidents and/or tampering.

If service is needed Vaultek will, at its option, exchange or repair without charge for parts or labor. Upon authorization of warranty service, customers are responsible for securely packaging product. Additionally, customers are responsible for costs of shipping to and from Vaultek service center.

If the claimed defect cannot be identified or reproduced, customers will be held responsible for the costs incurred. Please have the following information available before you begin a claim with Vaultek:

- Purchaser's name, mailing address, email address, and a phone number.
- Copy of receipt or online order number (if purchased directly from us or Amazon)
- Authorized Dealer Name (if applicable)
- Detailed description of the problem

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series

FCC

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement. Power is so low that no RF exposure calculation is needed.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For setup, tutorials, and FAQs visit www.vaulteksafe.com/support/vt-series



VAULTEK®

37 North Orange Ave. Suite 770 Orlando, FL 32801

VAULTEKSAFE.COM